 
 


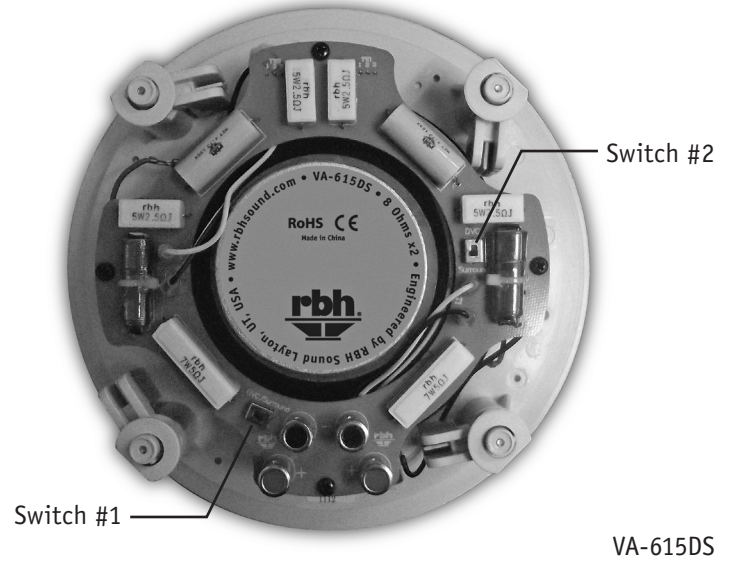

Redefining the way you experience sound.™

A-615DS and VA-615DS SURROUND/DVC SWITCHES

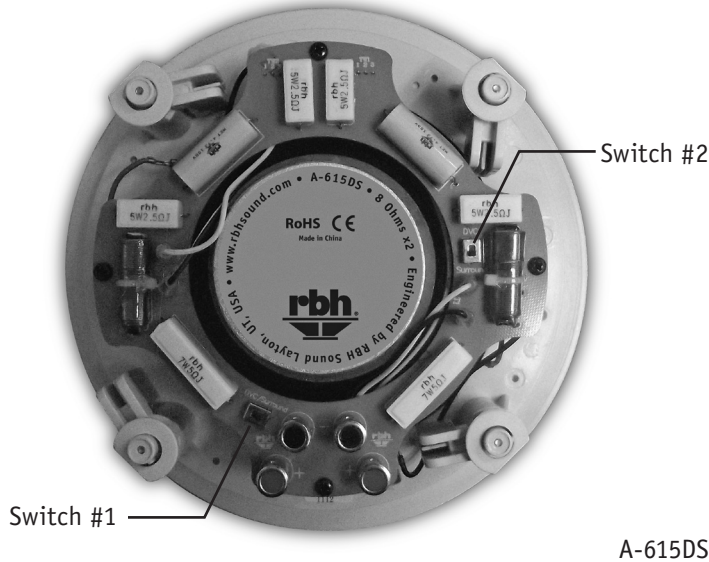

Below are the basic instructions for the switch configuration for both the A-615Ds and VA-615DS in-ceiling surround speakers.

DVC

Set both #1 and #2 switches to "DVC" and connect one channel to the left set of speaker terminals, and the other to the right set of speaker terminals.

WARNING: DO NOT OPERATE THIS CONFIGURATION WITH SWITCH #1 SET TO SURROUND MODE. DAMAGE TO THE SPEAKER AND/OR AMPLIFIER MAY RESULT.



 
Switch #1



Switch #2

MONO SURROUND (Single Channel Surround)

Set both #1 and #2 switches to "Surround" and connect the speaker wires to either the left or right set of speaker terminals.

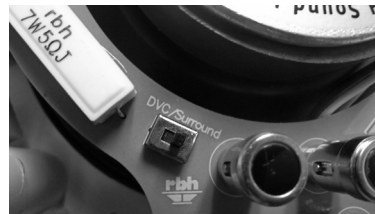

Switch #1



Switch #2

STEREO SURROUND (Dual Channel Surround)

Set the switch #1 next to the speaker terminals to "DVC" and switch #2 by the right coil to "Surround".

WARNING: DO NOT OPERATE THIS CONFIGURATION WITH SWITCH #1 SET TO SURROUND MODE. DAMAGE TO THE SPEAKER AND/OR AMPLIFIER MAY RESULT.



Switch #1



Switch #2

For assistance, please call 800-543-2205 or check <http://www.rbhsound.com> for updated instructions.